

Montageanleitung : Schreibtisch RS..

Assembly instruction : desk R

Beipack: 564334



RS19


RS16

RS12

RS08

RS2E

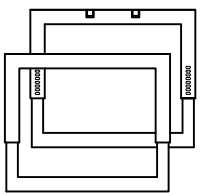2x (A) RFUS  109651 (109652)	2x (B)  534328 - 534331	8x (D)  8,4 x 1,2 500213	4x (F)  7 x 55 566811	4x (H)  M8 x 25 500165
	1x (C)  120/ 160/ 180 x 80 (200 x 100)	8x (E)  M8 x 16 508800	6x (G)  5 x 55 565981	1+1 x (J)  SW: 6 500282 SW: 4 500278

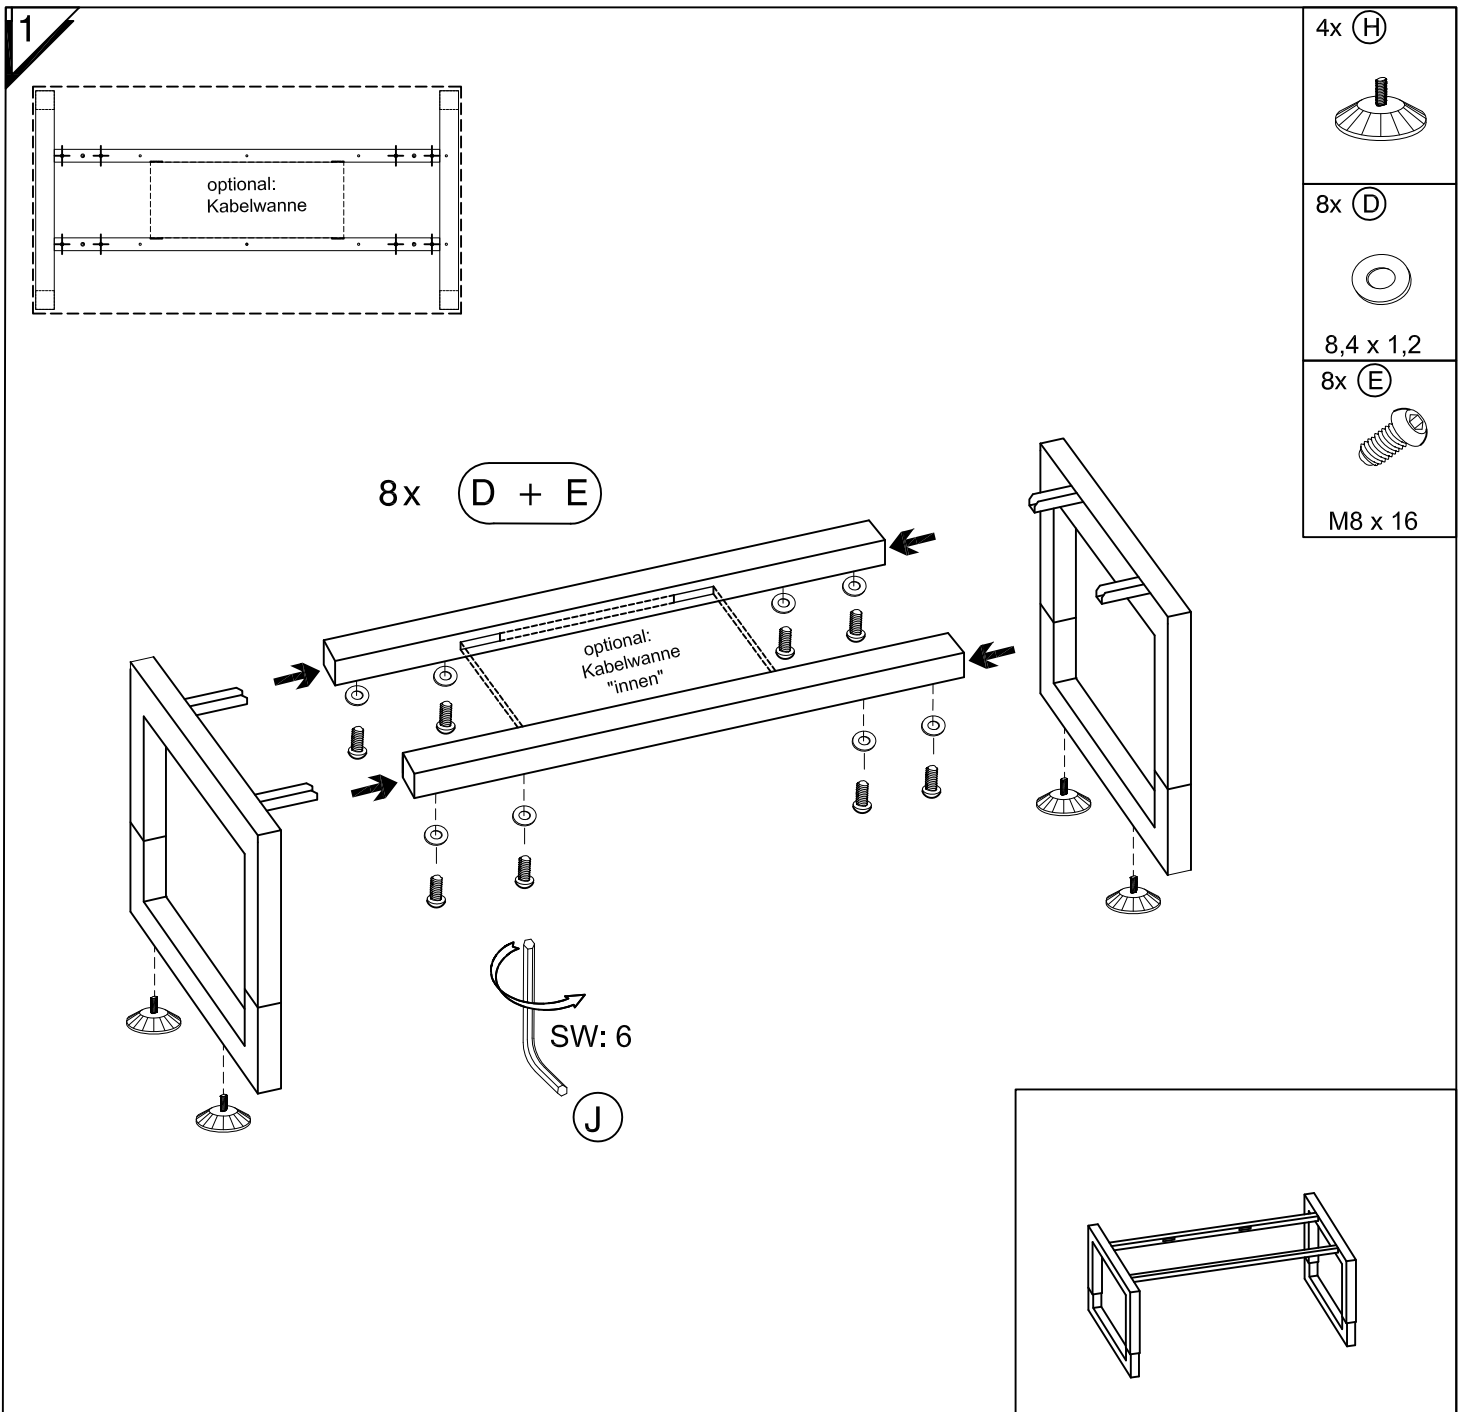


2 ohne Verkettungsplatte: weiter auf Seite 4


2* mit Verkettungsplatte: weiter auf Seite 2

* Nur bei Schreibtisch Serie RS + Verkettungs-Anbauplatten LE* / RT* / RA* :


2*

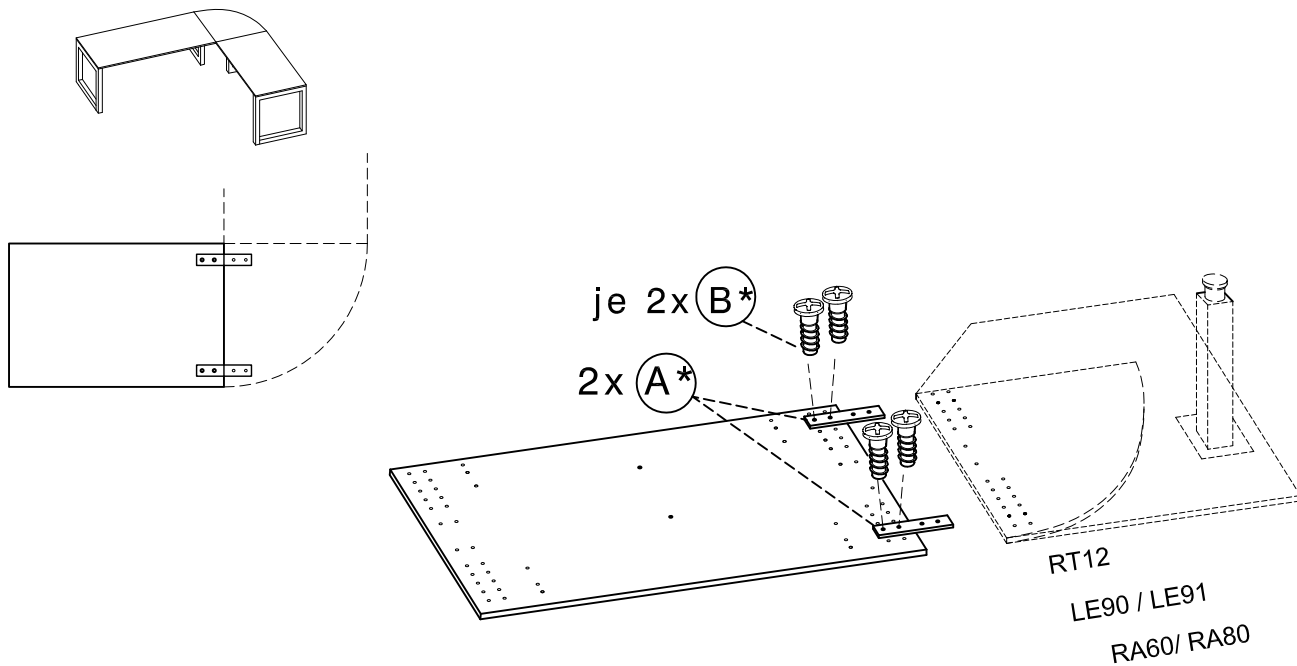


Eckwinkel LE90

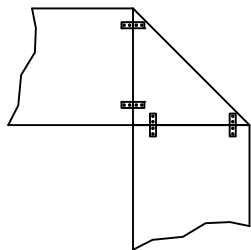


Eckwinkel LE91

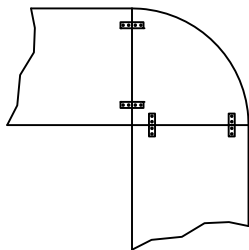


Trapezplatte RT 12

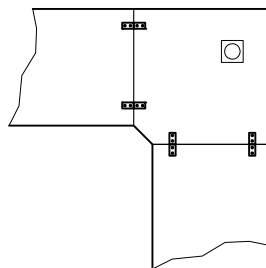

Ansatzstisch RA 60/80
(Deskend extension)

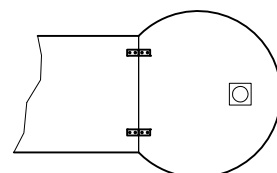


4 x (A*)



120x30x3mm

521144


4 x (A*)



120x30x3mm

521144


4 x (A*)



120x30x3mm

521144

2 x (A*)



120x30x3mm

521144

16 x (B*)



(6,3x16)

500250

16 x (B*)



(6,3x16)

500250

20 x (B*)



(6,3x16)

500250


12x (B*)




(6,3x16)

500250


1 x (C*)

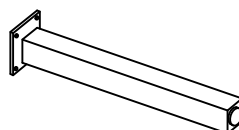

1 x (C*)

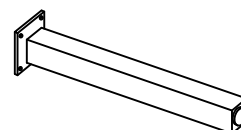

1x (E)



(4,5x35)

500240


1x (F)



Kabelklemme

500377

1x (E)



(4,5x35)

500240


1x (F)



Kabelklemme

500377

2x (E)



(4,5x35)

500240

2x (F)




Kabelklemme


500377

* Nur bei Schreibtisch Serie RS + Verkettungs-Anbauplatten LE* / RT* / RA* :

3*

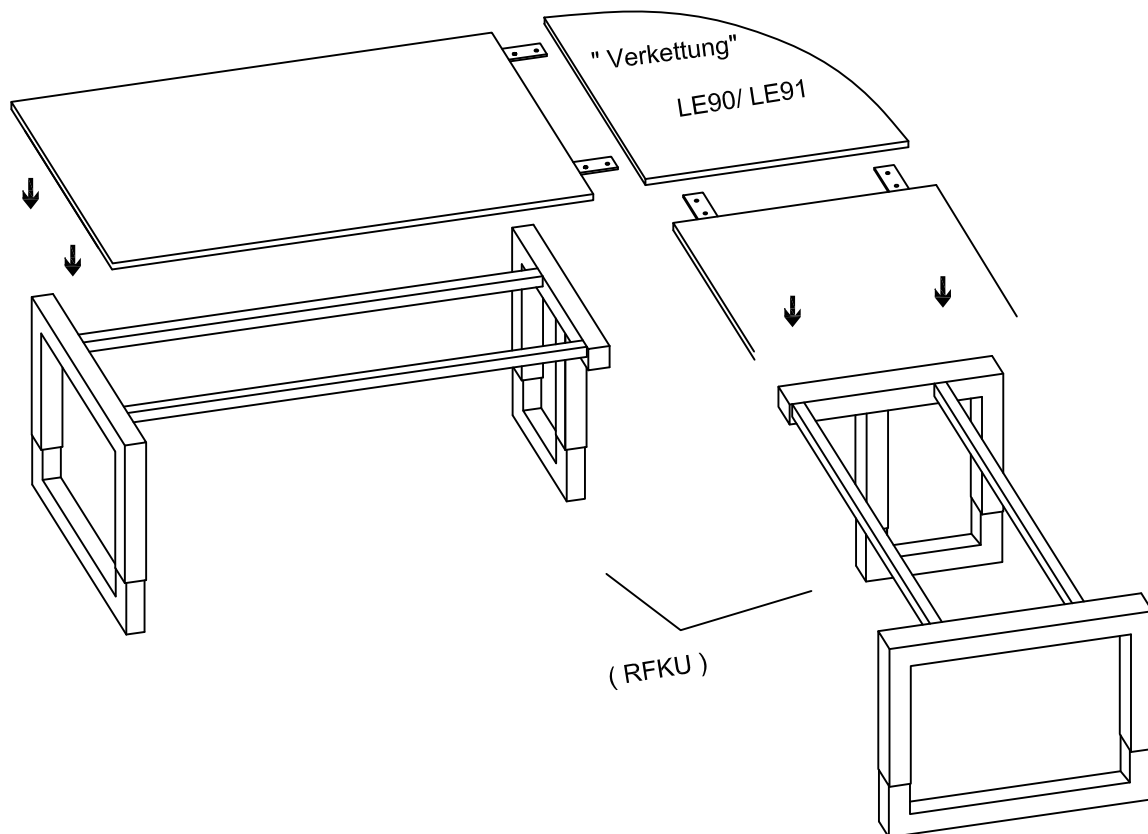

4*

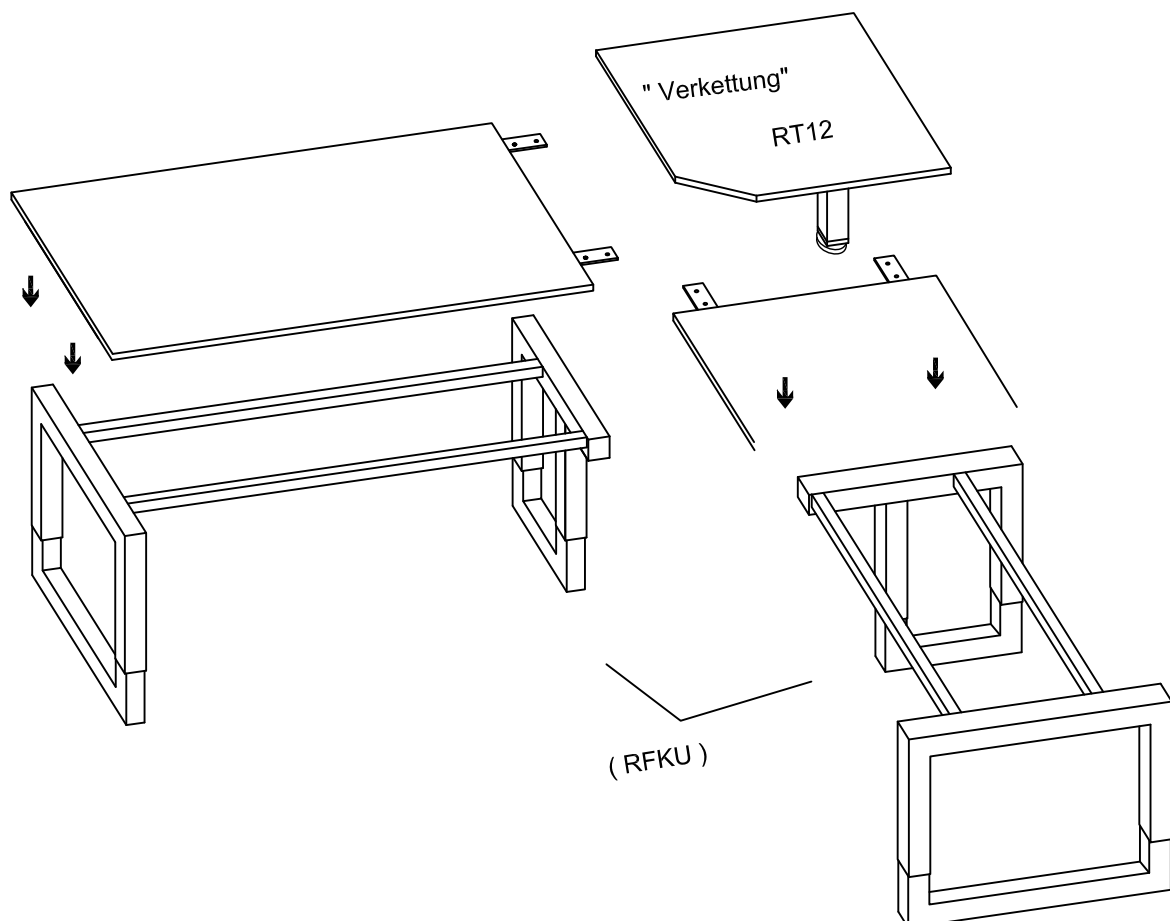

2



4x (F)

4x
"vorgebohrt"

(F)




7x 55

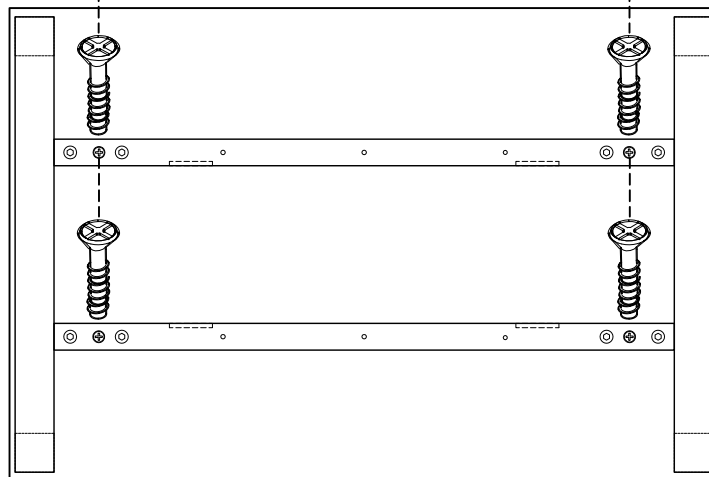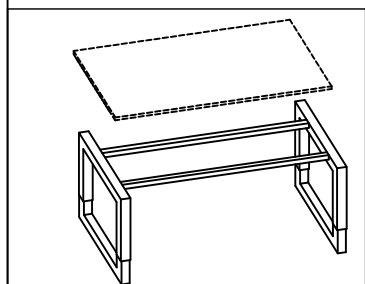


3


bis 1.20 m

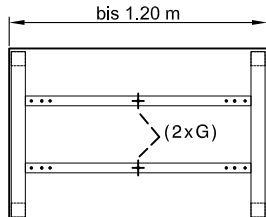

ab 1.60 m

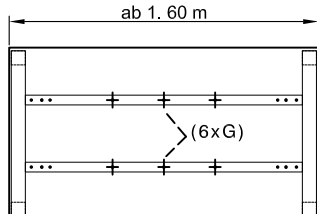2 bis 6x
"selbstschneidend"



(G)

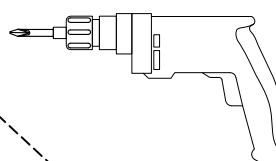



2-6x (G)



5 x 55

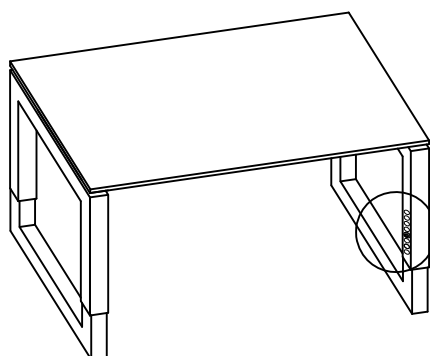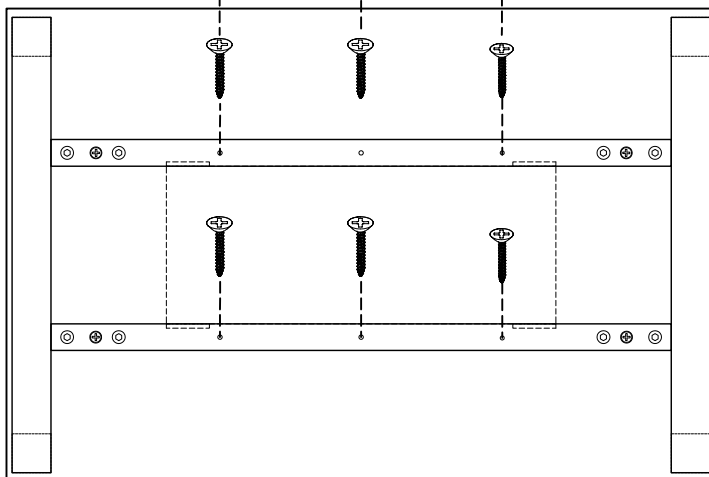

650-850mm

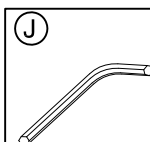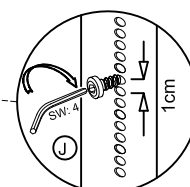

SW: 4