
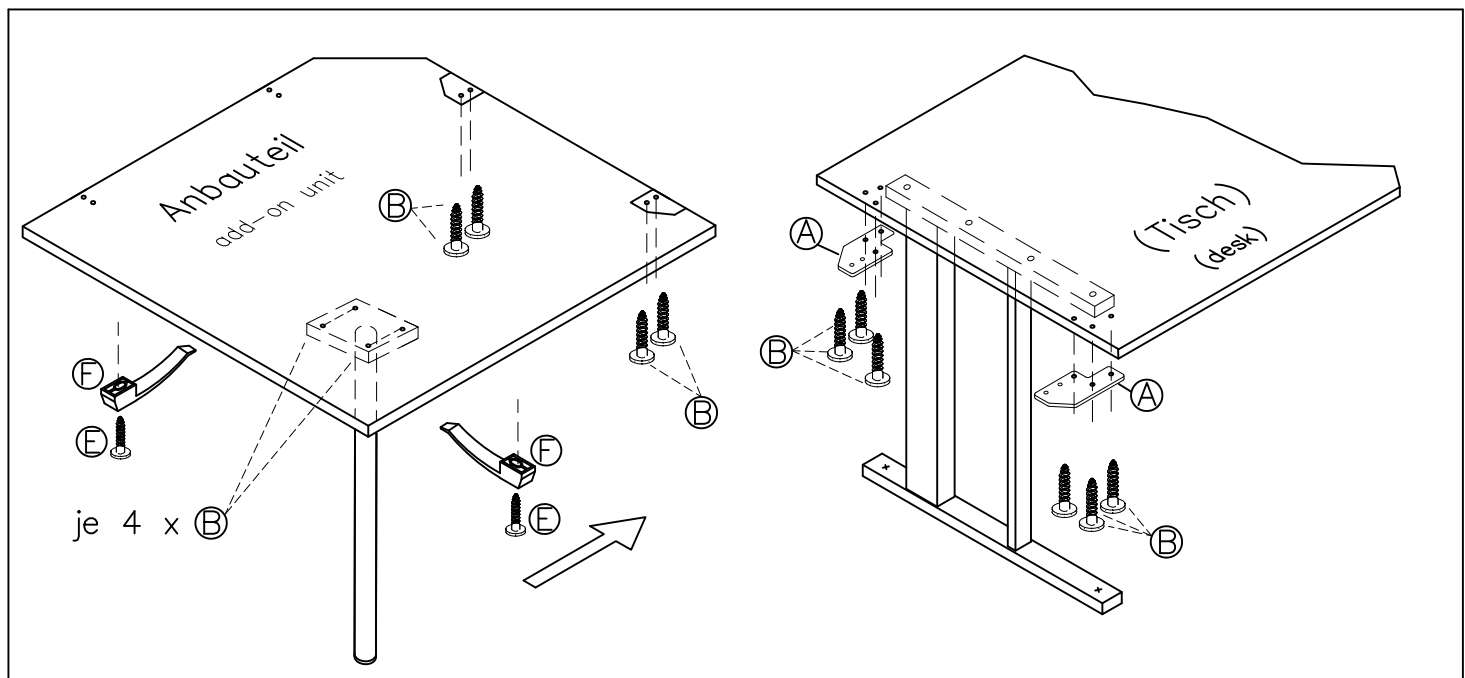


Assembly instruction : Cornerlink , deskend extension

Eckwinkel 90/ 91	Ansatzstisch LA160	Trapezplatte 12	Ansatzstisch 60/80 (Deskend extension)
4 x (A) 187772 	4 x (A) 187772 	4 x (A) 187772 	2 x (A) 187772
20 x (B) 500254 (6,3x19) 	24 x (B) 500254 (6,3x19) 	24 x (B) 500254 (6,3x19) 	14 x (B) 500254 (6,3x19)
		1 x (C) 	1 x (C)
1x (E) 1x (F) (5,0x30) 508262 Kabelklemme 	1x (E) 1x (F) (5,0x30) 508262 Kabelklemme 	2x (E) 2x (F) (5,0x30) 508262 Kabelklemme 	


Detail:

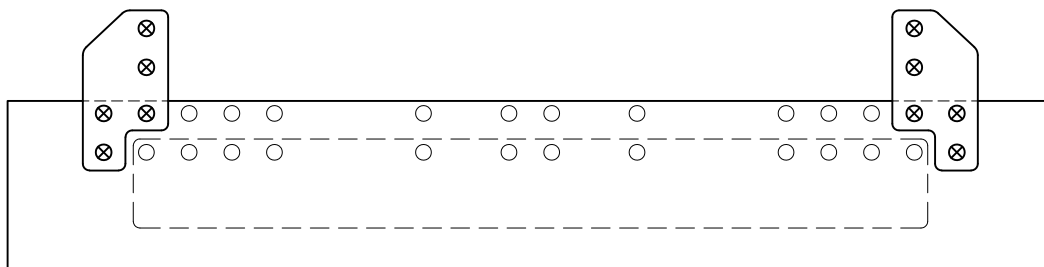


Montageanleitung Schreibtischserie : C. und Verkettungsplatte

Assembly instruction desk range C : for starter and add-on unit

Stellbeispiele:

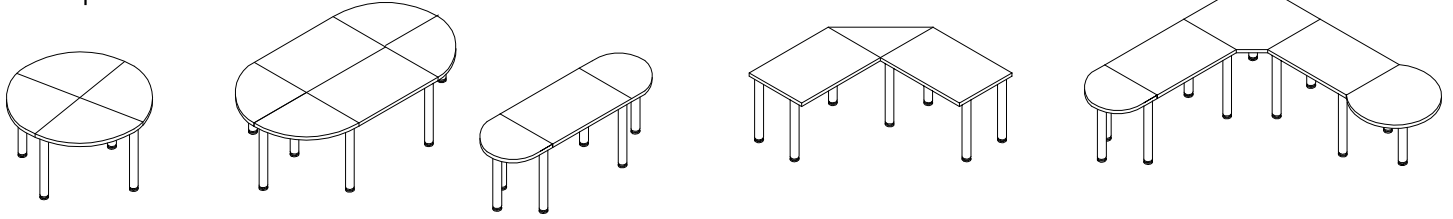

Tische:

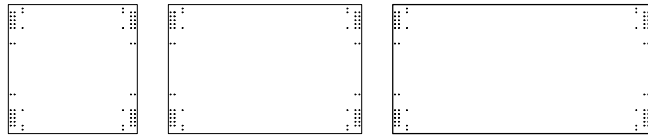


80/80

120/80

160/80

Anbauelemente:

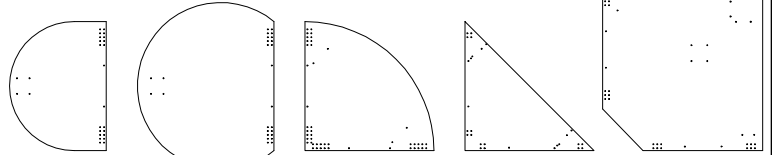

60/80


80/100

80/80



80/80

120/120

Beipack:



Sie benötigen dieses Werkzeug:




Ø 5mm

oder:




Pan-Head
5,0 x 25

Stellbeispiel ①

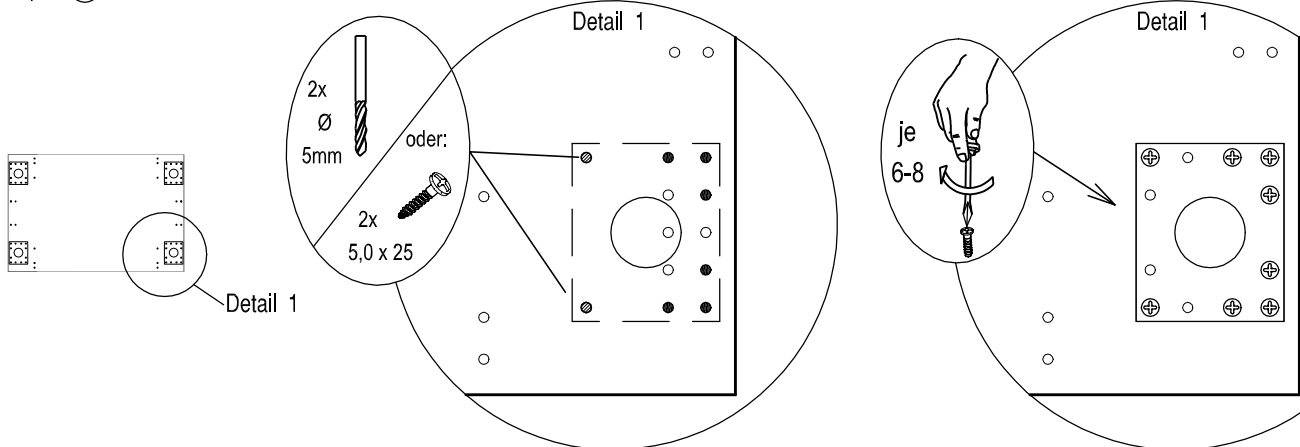


Stellbeispiel ②

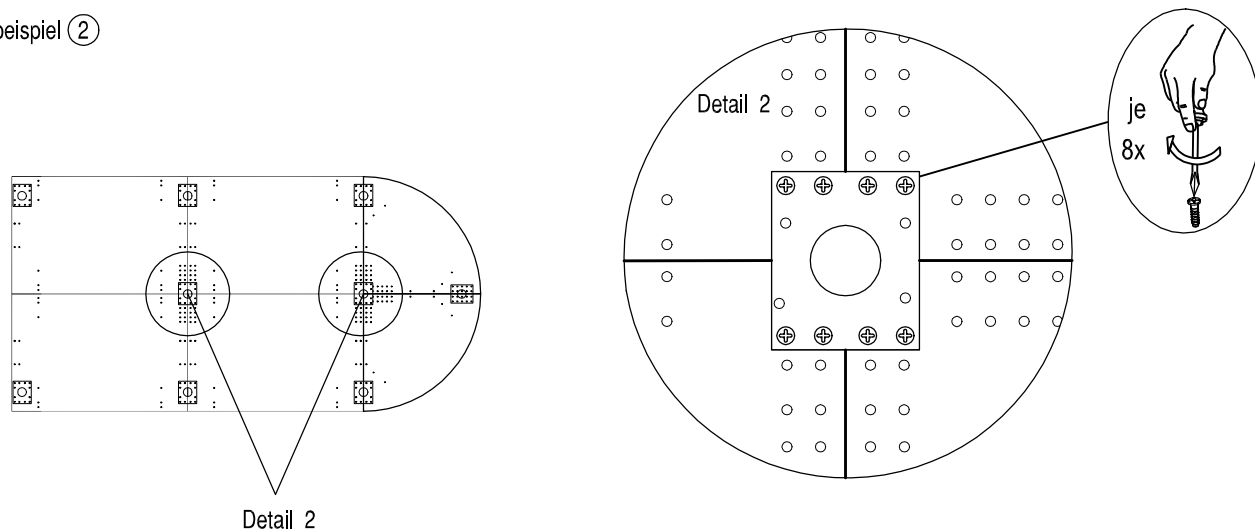


Montageanleitung Schreibtischserie : C. und Verkettungsplatte


Stellbeispiel ③

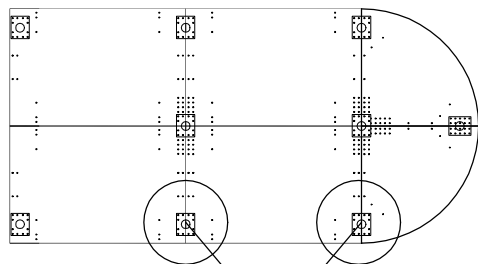


Detail 3

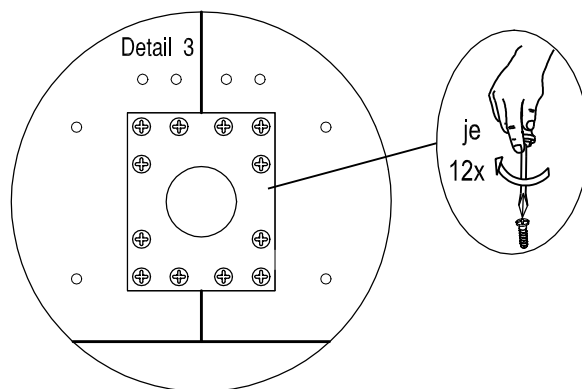


Stellbeispiel ④

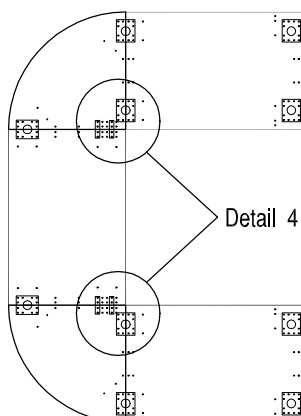


Detail 4

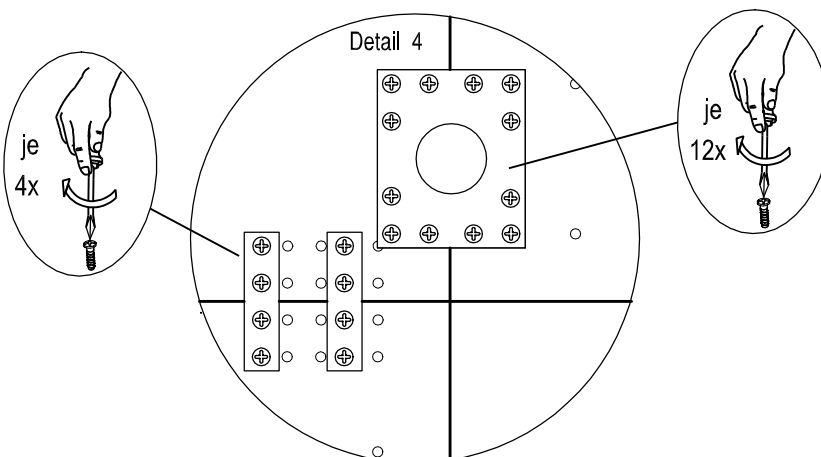


Stellbeispiel ⑤

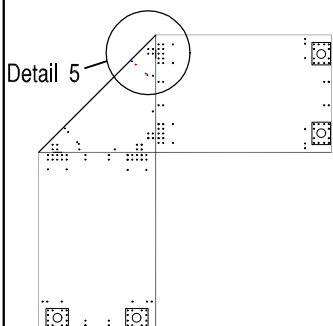

Detail 5

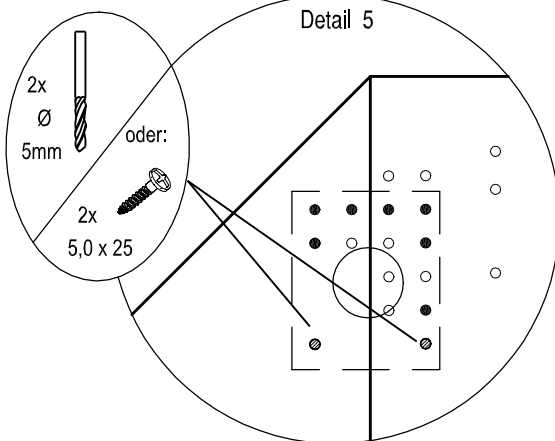


Detail 5

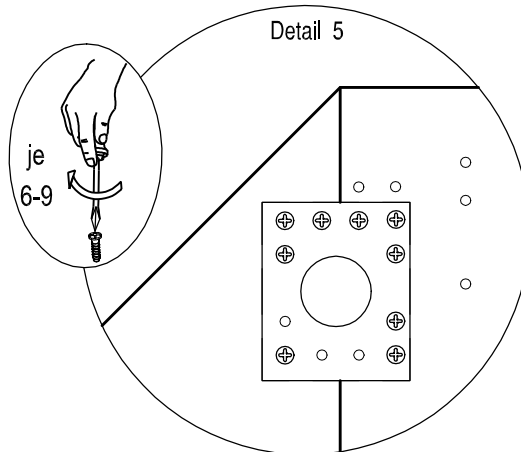


Detail 5


Stellbeispiel ⑥

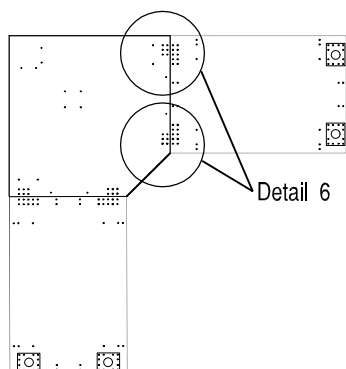

Detail 6

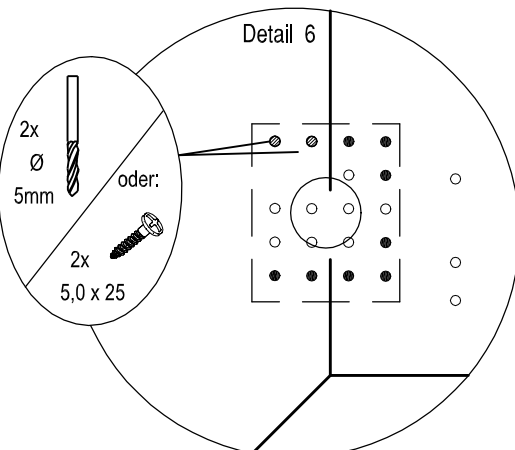

Detail 6

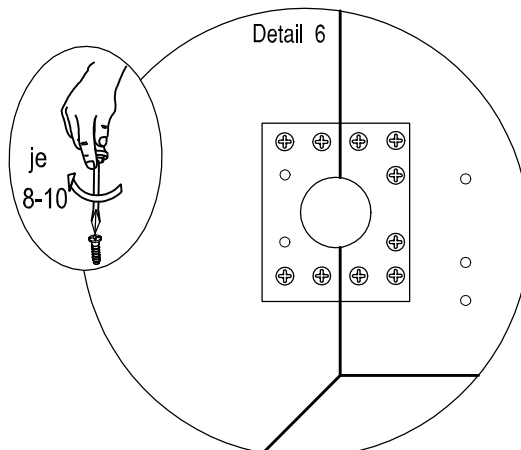

Detail 6